

D Heizkörper-Thermostatkopf

Montage des Thermostaten:

Der Thermostatkopf sollte nur waagrecht montiert werden.

Achten Sie darauf, den Thermostatkopf auf Markierung 5 zu drehen, damit er leicht am Ventilkörper befestigt werden kann.

Den Thermostaten mit der Markierung nach oben auf den Ventilkörper aufsetzen und die Überwurfmutter fest anziehen.

Bitte beachten Sie, dass der Thermostatkopf nicht verdeckt wird (z.B. durch eine Gardine).



TEC591100


GB Radiator thermostat head

Mounting the thermostat: The thermostat head should be mounted horizontally only. Be sure to turn the thermostat head to mark 5 so that it can be easily attached to the valve body. Place the thermostat on the valve body with the mark facing up and tighten the union nut firmly.

Please make sure that the thermostat head is not covered (e.g. by a curtain).


Temperaturregelskala:

Temperature regulation scale:

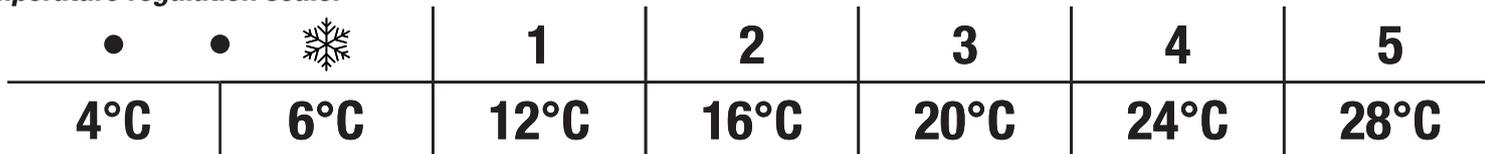

Funktion Temperaturbegrenzer:

Temperature limiter function:

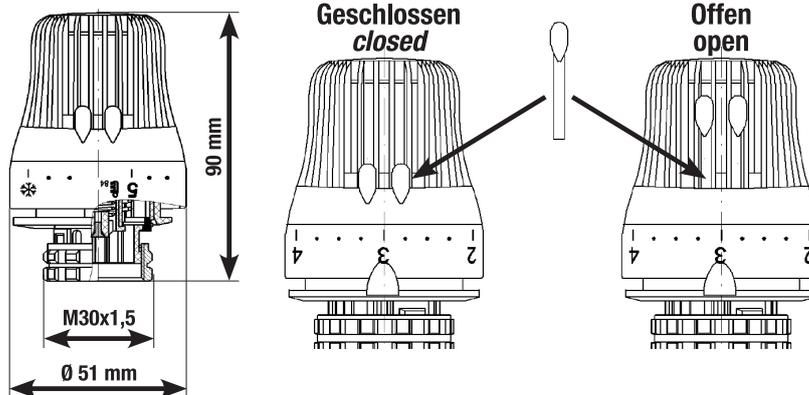

Conmetall Meister GmbH
Hafenstraße 26
29223 Celle • GERMANY
www.conmetallmeister.de